


WALL PAPER

Instructions




Things you'll need:

- Step Ladder
- Clean, dry cloth
- A little helper
- Sharp craft knife or box cutter
- The Super Helpful Overlap Thingy *(on the bottom of your sheet)*

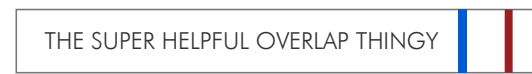

1 Positioning Sheet 1

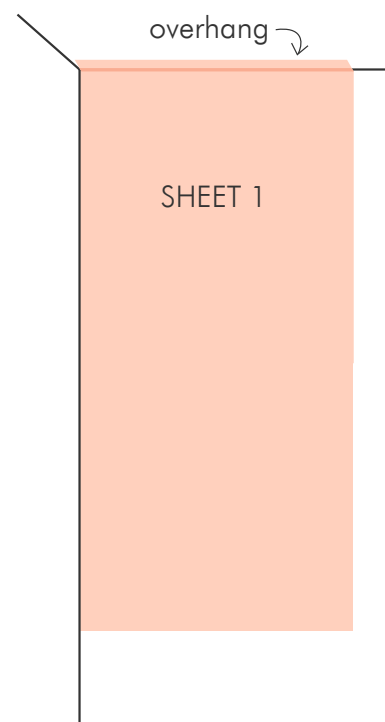


Pick a top corner to start with - right or left. For the purpose of these instructions we will start from the left.

Take a sheet and peel approx. 20cm of the backing paper from the top of the sheet. Line it up into the corner of the left side wall leaving 1.5cm overhanging the cornice and stick it in place. You will trim the overhang off at the finish.

Slowly peel down the backing sheet, aligning to the left edge of the wall, smoothing out any bubbles with your hand or a cloth.


If you didn't get it quite right just remove the sheet and try again!
Take your time to get it right for Sheet 1, as this will make installation of the remaining sheets easier.

2 Super Helpful Overlap Thingy

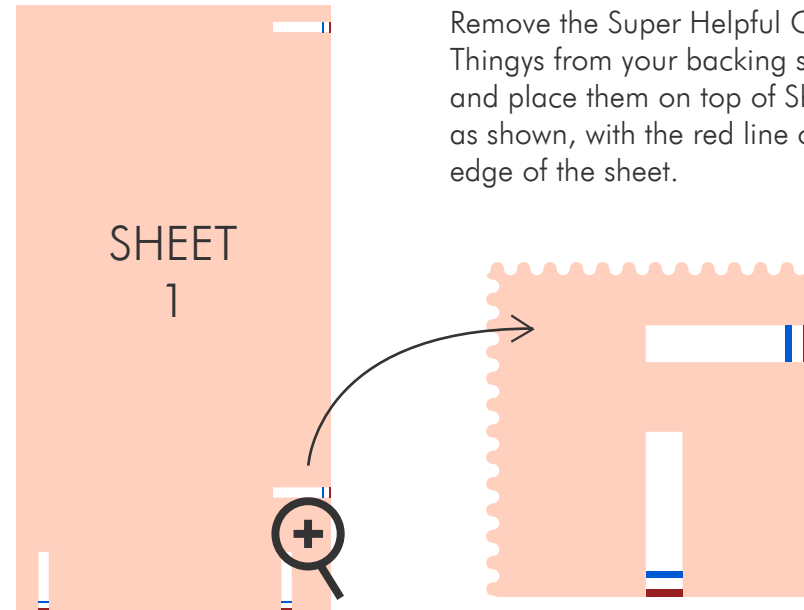

Remove the Super Helpful Overlap Thingys from your backing sheets and place them on top of Sheet 1 as shown, with the red line on the edge of the sheet.

3 Positioning Sheet 2

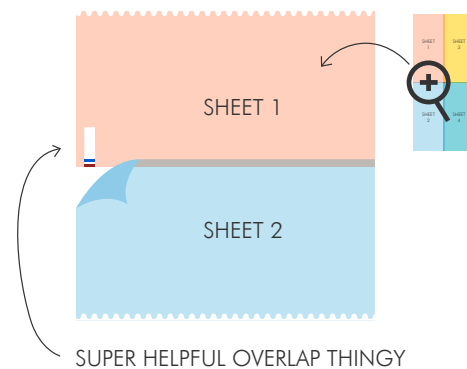


Peel down approx. 20cm of the backing paper.

Align the sheet to the top of the blue marker on the Super Helpful Overlap Thingy, making sure the print pattern is aligned.

Continue to peel backing paper off, smoothing out bubbles as you go.

4 Positioning Sheet 3

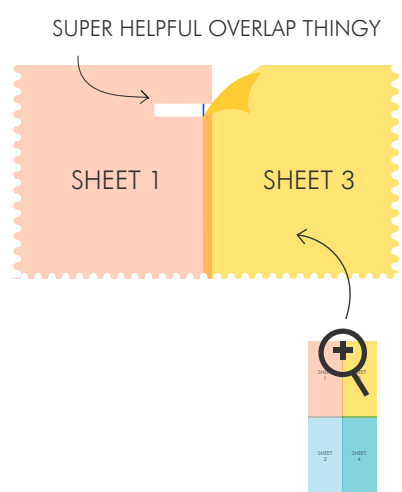


Peel back approx. 40cm of backing paper and align the left edge of sheet 3 with the Super Helpful Overlap Thingy, remembering to leave a 1.5cm overhang above the wall.

Tip: Get a helper to align the bottom half of the sheet as you do this

Once you are sure the print pattern is aligned, remove the rest of the backing paper, smoothing as you go.

5 Positioning Sheet 4

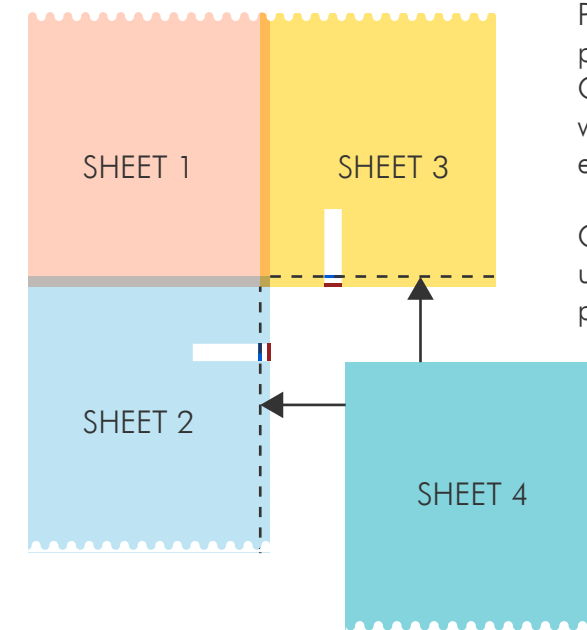

Peel back approx. 20cm of backing paper and using the Super Helpful Overlap Thingy, align the top edge with the top of Sheet 2 and the left edge with the left edge of Sheet 3.

Once you are sure the pattern lines up remove the rest of the backing paper, smoothing as you go.


6 Position Remaining Sheets



Repeat steps 1-5 until your entire wall is covered.

Once all the sheets are in place and you are happy with their alignment, remove the Super Helpful Overlap Thingsy.

7 Trimming

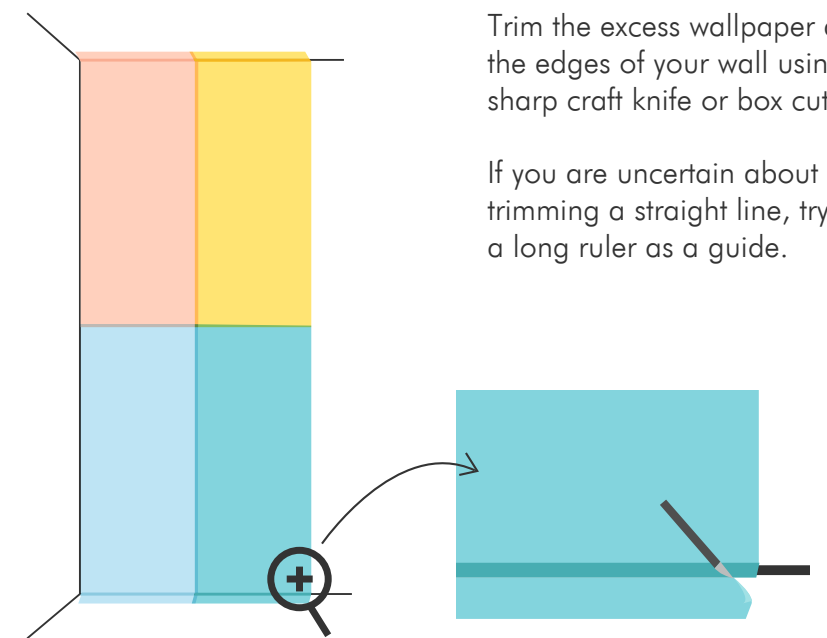

Trim the excess wallpaper along the edges of your wall using the sharp craft knife or box cutter.

If you are uncertain about trimming a straight line, try using a long ruler as a guide.